

## 2014 – Present Air-Cooled Installation Instructions

Thank you for purchasing a Hog Trough cup holder. We hope you get many years of safe enjoyment out of our product. If you have any questions during the installation, give us a call at 919-589-4174.

Required Tools:

1/2" Socket

7/16" Socket

Torx T-40

Torx T-25

Remove lower fairing cover by first removing a 7/16 nut on the inside of the glovebox, see picture below.



Carefully remove the plastic cover from the top of the lower fairing. This will allow you to access the crash bar clamp.



2014 – Present Air-Cooled Installation Instructions

Remove the two 7/16" nuts from the clamp around the crash bar clamp.



Here's a picture of the clap removed.



## 2014 – Present Air-Cooled Installation Instructions

Using a T40 Torx and ½" socket, remove the bolt located at the bottom of the lower.



Carefully slide out the lower fairing to access the bolts holding in the glovebox.



## 2014 – Present Air-Cooled Installation Instructions

Remove the three T25 Torx screws holding in the glove box.



Carefully remove the glove box, make sure to disconnect the vent by pinching the plastic slide and sliding it free.



## 2014 – Present Air-Cooled Installation Instructions

Remove the glove box lining by removing the three T25 Torx screws.



Remove the factory door by removing the two pins holding the hinges in place. To do this, use a small screwdriver and pry off the keepers. Please keep the keepers and pins as these will be reused.



Remove the factory spring. It will not be used with the HogTrough door.



## 2014 – Present Air-Cooled Installation Instructions

You should now be able to remove the factory door.



Remove the door catch by depressing the detents on each side.



2014 – Present Air-Cooled Installation Instructions

Remove the factory bump stops as they will not be used with the HogTrough doors.



Place the HogTrough door in place of the original door.



Using pins from the factory door, reinstall into the HogTrough door.



## 2014 – Present Air-Cooled Installation Instructions

Reinstall the two pin keepers.



Place the completed unit back into the faring by reversing this process.

